



IGLAND

User manual

Large bag BL

1200



Read through the entire manual before using the product. It contains important safety information.



nøsted &

Thank you for choosing Storsekkløft from IGLAND!

This user manual is designed to provide you with detailed information about the use, installation, safety, and maintenance of the equipment.

It is important that you read this manual carefully before using the machine.

The safety of our users is our highest priority. This manual contains important information on how to use the machine safely and avoid potential hazards.

To ensure your safety, we want you to be aware of and consider that accidents, misuse, and equipment failure can lead to dangerous situations. It is important that you position yourself during work so that any accident does not result in personal injury.

The instructions provided in this manual must always be followed. Careless or incorrect use can result in serious injury or death. Modifications or other alterations to the original design of the product are made at your own risk and responsibility. It is important to note that any modification or alteration of the product will void the warranty.

For a valid warranty, please remember that the acceptance form supplied with the product must be returned within 14 days.

If you have any questions or need assistance, please contact our service center at +47 479 20 192. Always state the type, serial number, and year of manufacture when making inquiries and ordering parts.

We are here to help you have a safe and enjoyable user experience.

Product	
IG227200	BL 1200

Revised	08.05.2024
Published	06/22/2023
P/N	IG390429
Website	Nosted.com/igland
Email	corporate@igland-as.com
Phone	+47 372 56 200

Reproduction of text or illustrations without permission is prohibited.

AI-translated from the original user manual

# TABLE OF CONTENTS	PAGE
1. Optional accessories	4
2. Safety instructions	5
2.1. General safety instructions	5
2.2. Safe use	5
2.3. Storage	6
2.4. Checklist before use	6
3. Main components	6
4. Technical specifications	7
4.1. Igland BL 1200	7
5. Installation	7
6. Operation	7
7. Maintenance	7

1. EXTRA EQUIPMENT

Igland BL 1200	
DESCRIPTION	PRODUCT NO.
Mounting bracket for SMS	IG500050
Mounting bracket for HVM and SMS	IG500056
Mounting bracket for Avant/Multione	IG500048
Mounting bracket for Triangle quick coupling	IG500059
Mounting bracket for 3-point mounting	IG500063
Mounting bracket for Scan Frame	IG500044
Mounting bracket for JCB Compact Tool carrier	IG500043
Mounting bracket for S40 excavator attachment	IG500046
Mounting bracket for S50 excavator attachment	IG500047
Mounting bracket for old Ål type 3	IG500053
Mounting brackets for Euro combi	IG500062
Mounting brackets for Euro (John Deere)	IG500061
Mounting brackets for John Deere 400/500	IG500067
Mounting brackets for skid steer loaders	IG500064
Mounting brackets for JCB 406-407-409, "Small" Volvo-ZettelMeyer 502-602-702	IG500054
Mounting bracket for Weidemann Hoftrack 1380	IG500049



2. SAFETY INSTRUCTIONS


2.1 General safety instructions To ensure safe use of the attachment, it is important to follow our safety instructions carefully.

- **Read the user manual:** Before using the tool, read and review the user manual carefully to understand its proper use and maintenance.
- **Area of use:** The BL 1200 is a stable and safe tool for handling large bags. Only use the product on the tractor's loading device. **Never use** the product for tasks other than those for which it is designed. **The manufacturer is not liable** for damage or destruction caused by misuse of the equipment.
- **Safety distance:** Observe a safety zone of 10 m.
- **Operation:** Familiarize yourself thoroughly with the functions of the product. Ensure that only qualified and trained persons use the equipment. Exercise the utmost caution at all times.
- **Personal protective equipment:** Always use the necessary personal protective equipment.
- **Risk of crushing:** Be aware of the risk of crushing from all moving parts.
- **Emergency preparedness:** Keep first aid equipment and emergency numbers readily available in case of an accident or emergency.
- **Modifications or other alterations** to the original design of the product are made at your own risk and responsibility. It is important to note that any modification or alteration to the product will void the warranty.
- **Inspect the product** for signs of wear, damage, or loose parts and screws. Replace worn or damaged parts with components approved by the manufacturer. All damage must be repaired before the product can be used again.
- **Keep a record of maintenance and repairs** carried out on the product.



2.2 Safe use

- **Follow safety rules and exercise the utmost caution** to limit and prevent accidents.
- **Make sure that the product is in good condition before use** and that it has undergone regular maintenance checks.
- **Ensure that all warning signs** are visible and legible at all times.
- **The implement is operated** from the tractor cab.
- **When transporting,** the load **must** be secured with additional lashing.
- **Always take into account** the weight distribution and stability of the tractor or load.
- **Avoid lifting high,** as this may cause the tractor to tip over.
- **Keep the load as low** as possible with a low center of gravity.
- **Never stand** between the tractor and the implement.
- **Avoid scarves and other loose clothing** that can get caught in moving parts.
- **Do not overload** the product's capacity and always follow the manufacturer's recommendations. The maximum lifting capacity of the implement is 1200 kg.
- **Never walk under** the lifted implement.

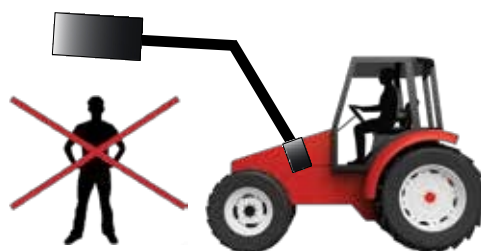

- **Maintenance must only** be carried out with the engine switched off.
- **Never make adjustments or perform maintenance** on raised implements.
- **Exercise extra caution** when driving on slippery surfaces.
- **Avoid driving on** sloping or inclined terrain.
- Remove **snow, ice, or other foreign objects** before use.

3. MAIN COMPONENTS

2.3 Storage

- Store the equipment in a dry and secure place.
- Always park on level and firm ground.
- Never leave the machine with the implement raised.
- Prevent children from climbing or playing on or next to the equipment.
- Exercise caution when assembling and disassembling.



2.4 Checklist before use

- Always inspect the product for wear and damage before use. Any damage must be repaired by qualified personnel before the equipment is used again.
- Ensure that you have a full overview of the work area.
- Keep children and pets away from the work area.
- Lubricate the equipment as specified.
- Follow safety rules to limit and prevent accidents.



No. Main components

1. Hook
2. Bracket
3. Attachment to tool holder

4. TECHNICAL SPECIFICATIONS


Igland BL 1200	
Height	170 cm
Width	100 cm
Weight	75 kg
Max. lifting capacity	1200 kg

5. ASSEMBLY

Brackets are secured with 4 screws each.



Mount the desired mounting bracket with four bolts and nuts.

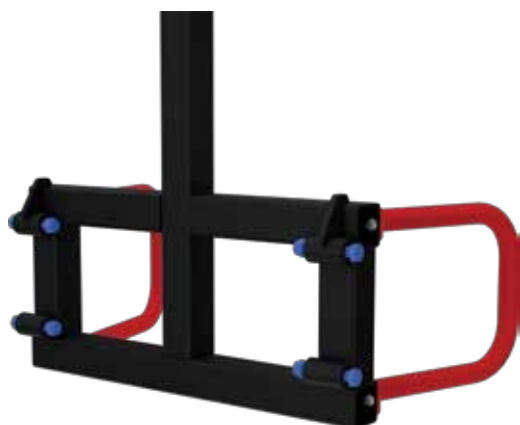

Connect the implement to the tractor and ensure that the coupling is sufficiently locked.

6. OPERATION

Always take into account the weight distribution, stability, and lifting capacity of the tractor or loader. Smooth movements reduce the risk of damage to the implement and bag.

Tilt the implement down so that the hook reaches the lifting loop on the bag. Hook the loop onto the hook. Tilt the implement up while driving the tractor towards the bag so that it does not drag on the ground. Lift up and make sure that the bag rests between the brackets before moving.

To set the bag down, lower the implement and tip it down. At the same time, drive carefully away from the bag to avoid dragging.

7. MAINTENANCE

Interval	Component	Description
First 10 hours	Screws and nuts	Retighten
"Every 100 hours/annually"	Screws and nuts	Retighten



IGLAND Workshop and Service Center

Our Workshop and Service Center in Mandal provides technical support for all our products.

We service and repair older and well-used winches. This extends the life of the products and is good for the environment.

Do you need:

Technical support for timber trailers

Accessories or additional equipment

An appointment for service or repair of a

winch Call our service office on +47 372 56 200

Email: service.igland@nosted.com

nøsted &

Doneheia 17, 4516 Mandal