




Nøsted Kjetting a.s

Mounting instructions - Scan Trac


Before mounting the chain, check that it's not twisted and that the tightening cams are "open".

Scan Trac is mounted by spreading the chain symmetrically over the tire. Then drive on to the chain and connect the sidechain. Driving on to a piece of wood or similar before the mounting, simplifies the operation. the chain can now be fitted without moving the vehicle. Show extrem care to avoid personal accidents. Please note that cams must be on the outside of the tire. Dual triple chains have cams inside and outside. Tighten the chain by using the cams. keep the chain relatively tight.

If brekage occurs Scan Trac should be repaired immediately to avoid further damage. Spare parts are availabe from your dealer.

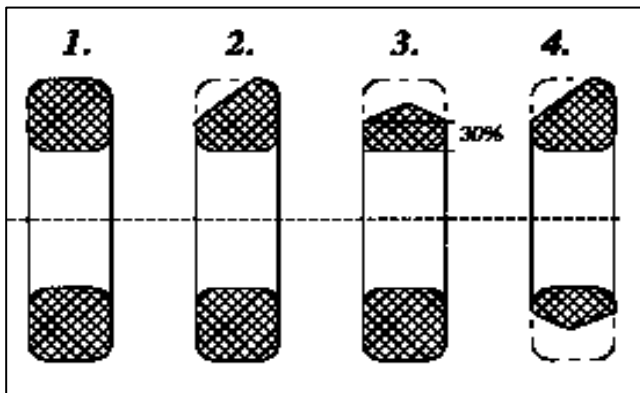

Connect the sidechain

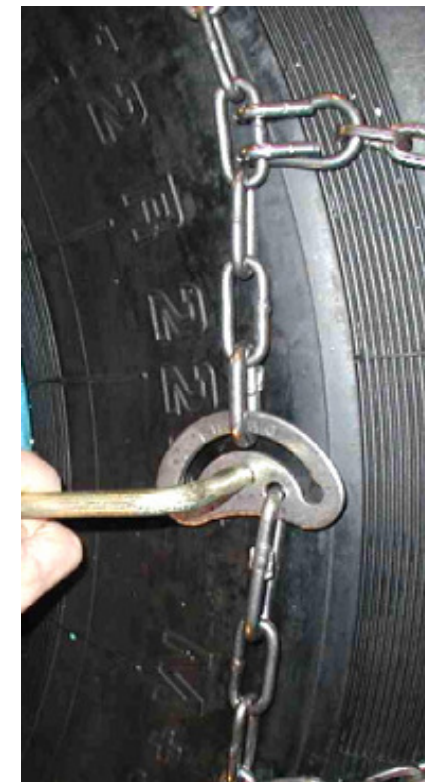

Tighten the sidechain

The sketch shows a chain link evenly worn on one side (3), by changing the rolling direction, from left to right hand wheel ans vice versa. When max 70% of the material is gone on the most worn chain link, the chain should be turned over (4) and used on the back for prolonged life. Keep the cams on the outside.

NB!

Scan Trac is not made for off road use. Extreme spinning and other misuse may cause chain brekage and damage to personell and vehicles.